

MotorisedBlinds

The smart choice

Motorised Roman Blinds Installation & Pairing Instructions


FITTING INSTRUCTIONS 1/2

You should have:

- Roman blind (fully assembled)
- Fixing brackets (quantity to suit the length of a blind)

YOU WILL NEED


- Screwdriver
- Pencil
- Drill
- Tape measure
- Step ladder

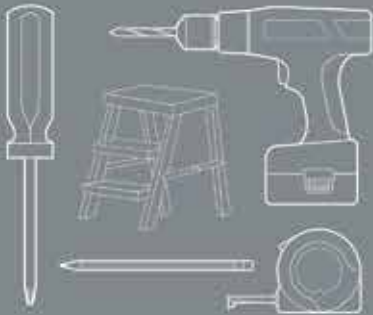

The installation of this product should be conducted by someone competent in DIY.


STEP 1 - FITTING THE BRACKETS

Choose how to mount the brackets. The brackets are a universal type that can be used to top fix or face fix.

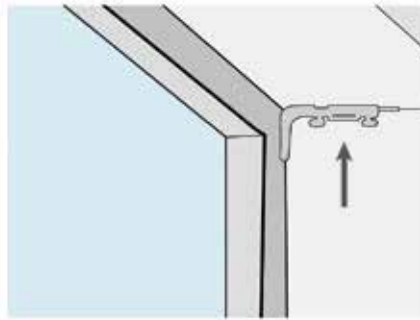

Top Fix

Top fix to the top of the recess.

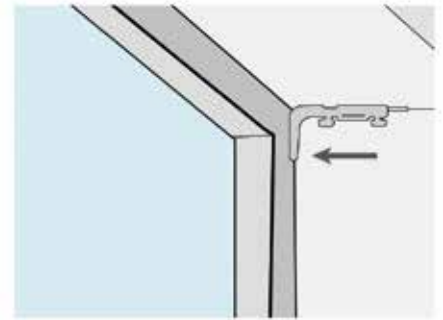


Face Mount

Face mount onto a wall/ window frame.

Please note: if using a battery pack sufficient clearance is required for the battery pack.

Deciding Where To Mount The Brackets

Ensure that brackets are positioned a suitable distance away from any window/ door handles or any other obstructions to allow the blind to operate smoothly.

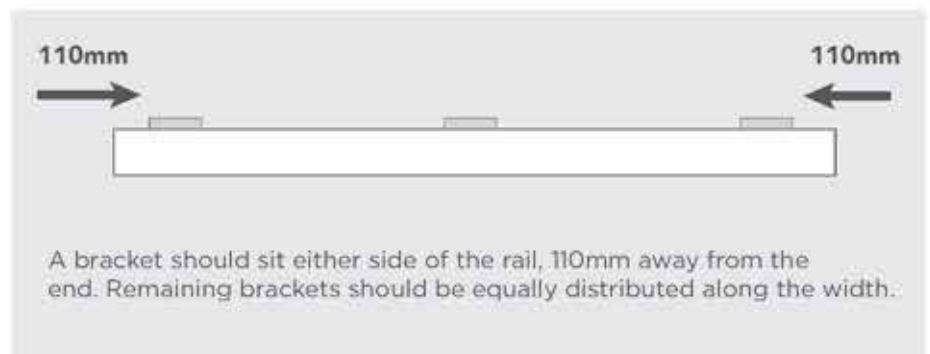

Hold each bracket into place and mark the hole positions using a pencil. Fit each bracket using 2 screws provided. If a pilot hole is required, use a 2.5mm drill bit. Ensure the brackets are level to ensure the smooth operation of the blind.

For fixing to alternative surfaces i.e. plaster/ concrete, alternative suitable fixings should be used.

WARNING:

PLEASE TAKE CARE WHEN UNPACKING YOUR BLIND, DO NOT USE A KNIFE OR ANY SHARP OBJECTS.


FITTING INSTRUCTIONS 2/2

STEP 2 - FITTING THE BLIND

We supply the headrail with a blind already attached to it.

When the brackets have been fitted to the window area, holding the blind up, rest the front ridge of the rail onto the front lip of the bracket.

Lift the back of the rail to meet the bracket, push centre of the spring so that it clicks into place securely and release.

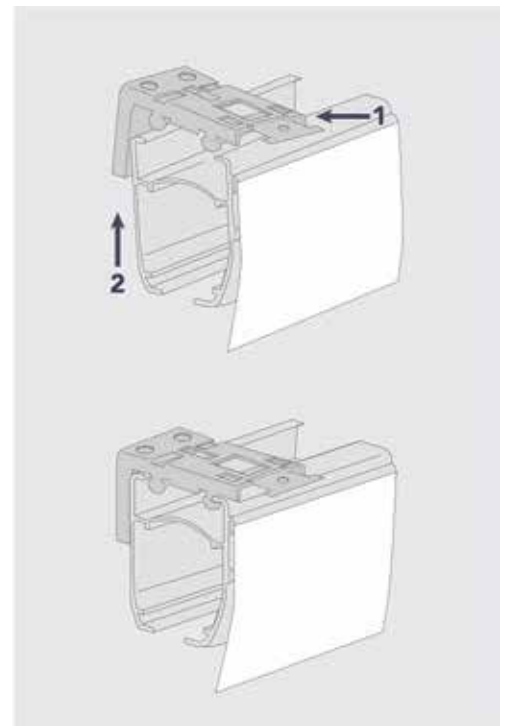


BATTERY PACK FITTING INSTRUCTIONS

LI-ION RECHARGABLE BATTERY PACK



1. Attach the wall brackets to desired area in window recess, leaving enough room for the blind.

**The battery pack can be secured outside the headrail in either vertical or horizontal position.*

We recommend the battery pack is secured behind the headrail so it is hidden from view.

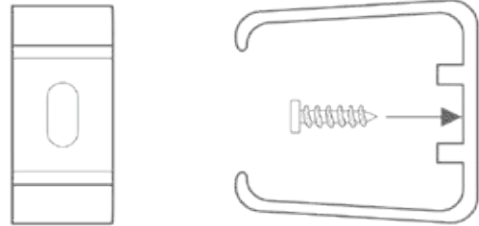

2. Connect the battery pack to the motor.

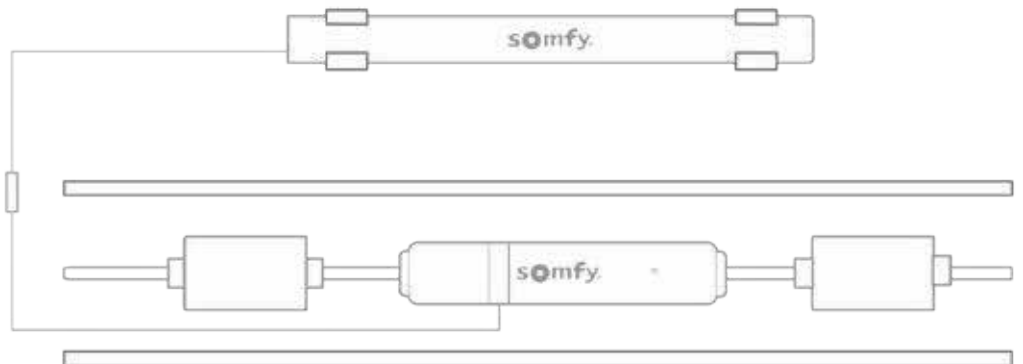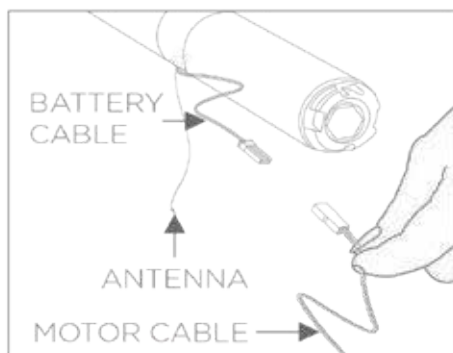


BATTERY PACK FITTING INSTRUCTIONS

LI-ION RECHARGABLE SOLAR PACK

1. Fix the mounting brackets, to the selected area you wish to place the battery.

**The battery can be secured outside the headrail in either vertical or horizontal position.*

We recommend the battery is secured behind the headrail so it is hidden from view.

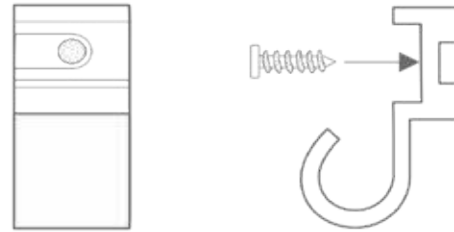

2. Clip the battery into the mounting brackets.



3. Clean the solar panel corners and the selected area on the window where the solar panel is to be fitted with the alcohol prep pad and allow to dry for 2 minutes.




BATTERY PACK FITTING INSTRUCTIONS

LI-ION RECHARGABLE SOLAR PACK


4. There are two options to fit the solar panel.

Adhesive Tape: Apply the adhesive tape to the four corners of the solar panel facing upwards. Position the solar panel on the window facing outside, press the entire panel with firm even pressure onto the glass for 15 seconds. Allow 24 hours for the adhesive to bond to the glass, do not disturb during this period.


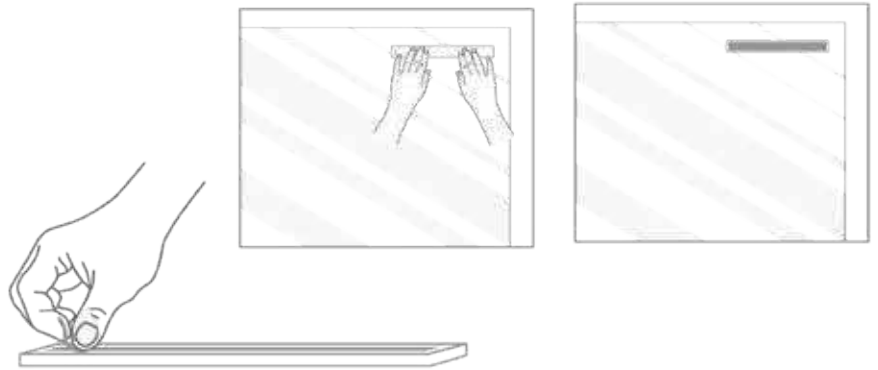


Or

Attach the wall brackets to desired area in window recess, leaving enough room for the blind.

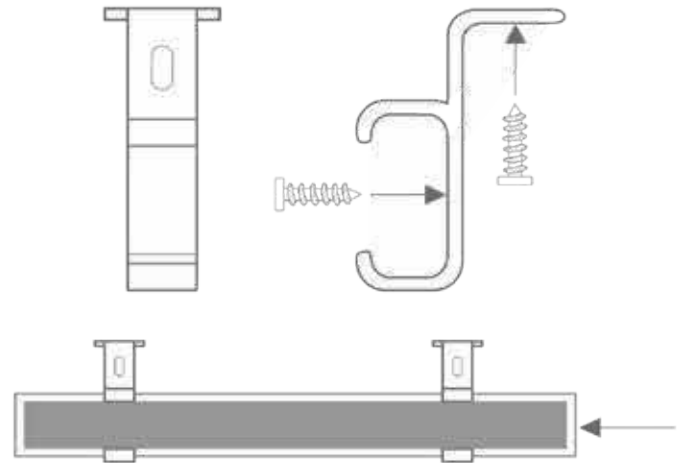


5. Connect the single end of the wire harness to the motor, connect the dual end to the solar panel and battery.

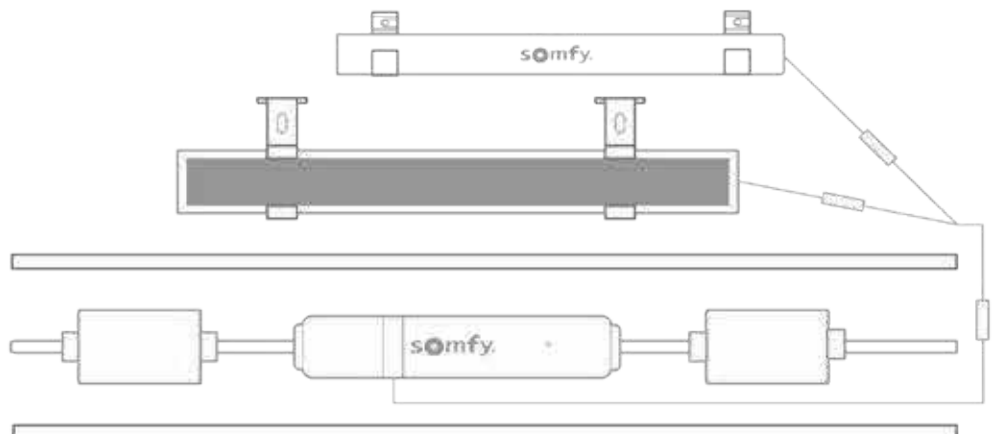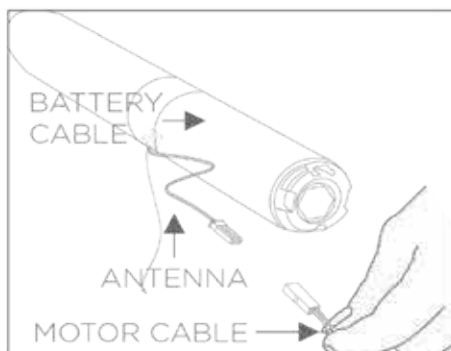


OPERATING YOUR SOMFY REMOTES

SINGLE CHANNEL REMOTES

SITUO RTS

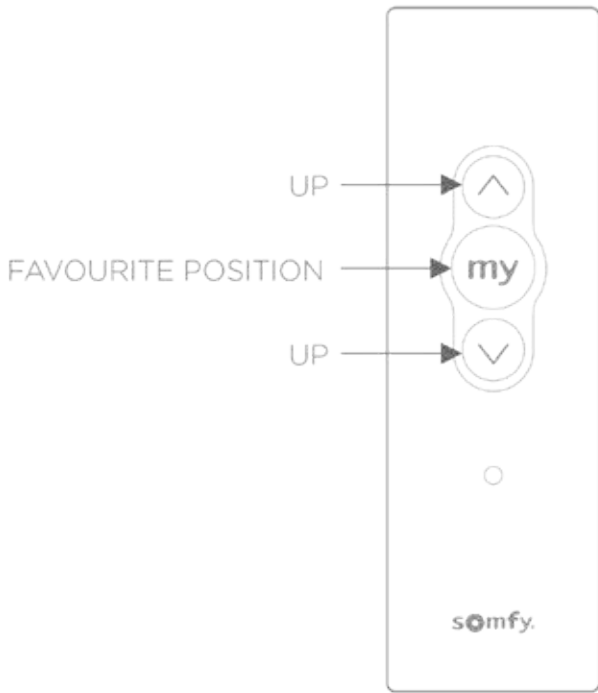


SITUO 1 RTS

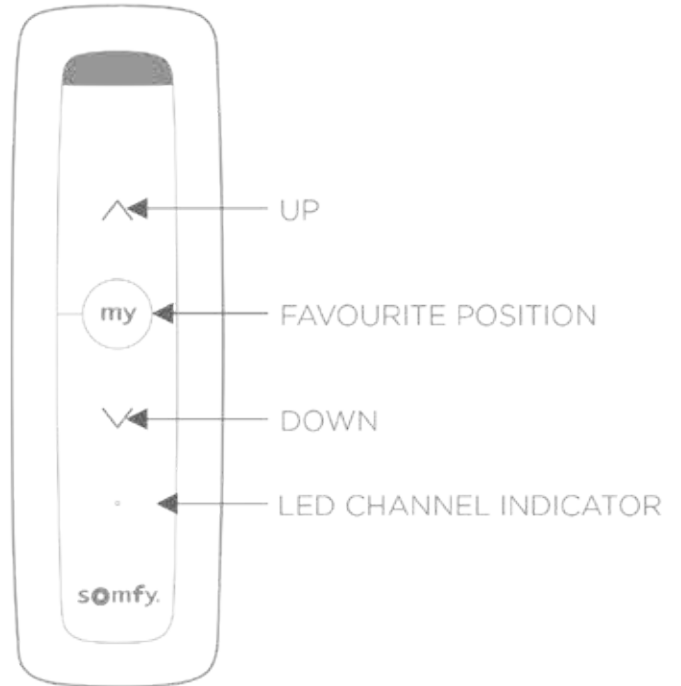


MULTI-CHANNEL REMOTES

SITUO 5 RTS

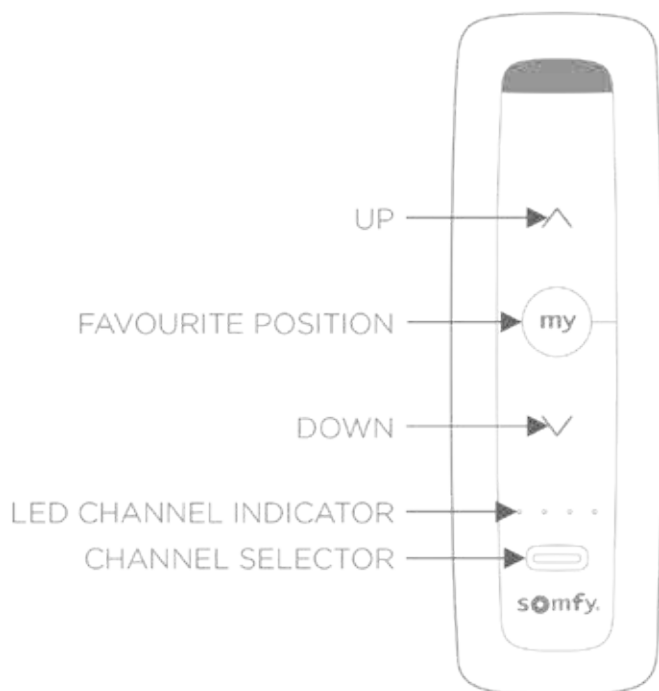

TELIS 16 RTS

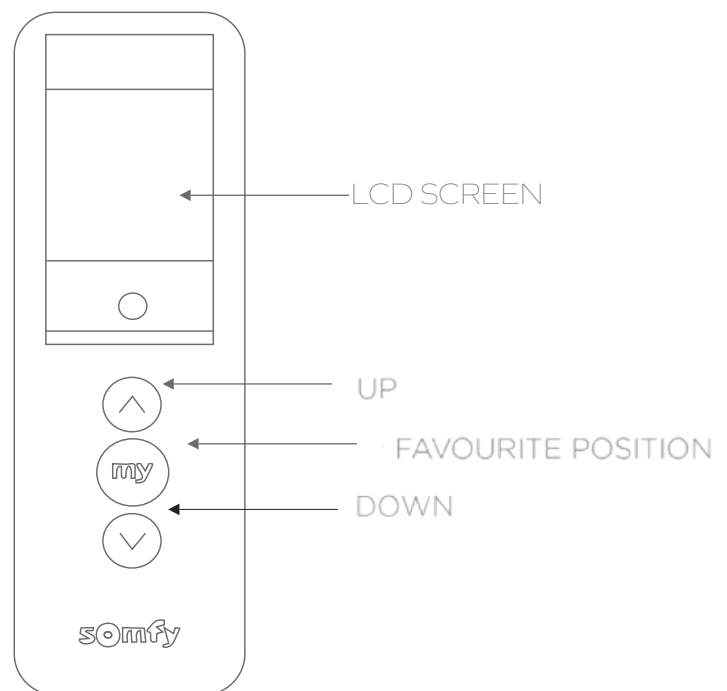

LIFTING THE BLINDS UP

ALL HANDSETS

1. Briefly press the **UP** button to lift the blinds.



ALL HANDSETS


2. Press the **MY** button when the desired position is reached.



LOWERING THE BLINDS DOWN


ALL HANDSETS

1. Briefly press the **DOWN** button to lower the blinds.

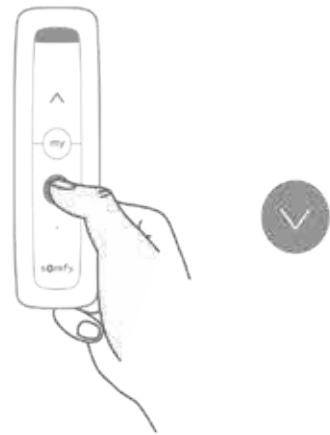


ALL HANDSETS


2. Press the **MY** (stop) button when the desired position is reached.

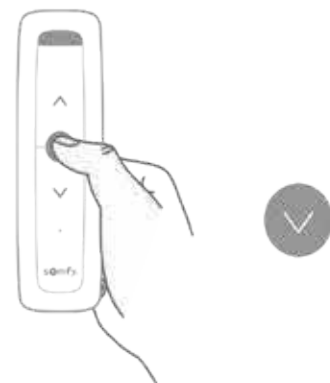

PROGRAMMING INSTRUCTIONS

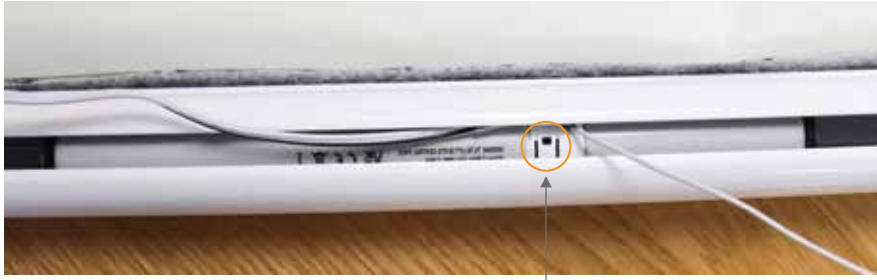

PROGRAMMING BUTTON

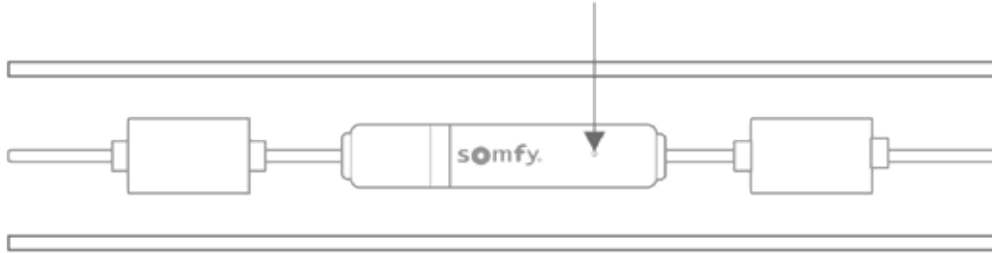


**When programming the motor the blind will be required to jog to confirm settings have been programmed, if the blind does not jog press the program button on the motor briefly until the blind jogs once.*

**Power should only be connected to the blind/blinds being programmed. All other blinds should be disconnected from their respective power while programming is in progress.*

PAIRING A REMOTE WITH A MOTOR


SINGLE CHANNEL REMOTE

1. On the remote, press and hold the **UP** and **DOWN** buttons simultaneously until the blind jogs.

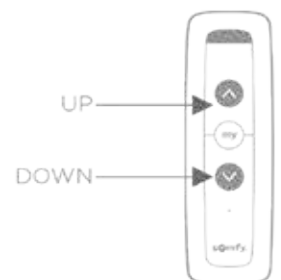

MULTI-CHANNEL REMOTE

1. Using the **CHANNEL SELECTOR**, select the desired channel (channel indicator will briefly be lit).

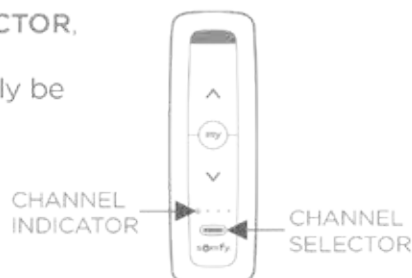

2. On the remote, press and hold the **UP** and **DOWN** buttons simultaneously until the blind jogs.



PROGRAMMING INSTRUCTIONS

PAIRING A SECOND REMOTE

**Note: Please finish programming the first remote before pairing a second remote.*

SINGLE & MULTI-CHANNEL REMOTE

1. Using a paperclip or pen, press and hold the **PROGRAM** button on the original remote or the motor until the blind jogs once.
2. Using a paperclip or pen, press the **PROGRAM** button on the new remote until the blind jogs once. Second remote is now added to the memory and can be used to operate the blind.

ORIGINAL REMOTE



Press for 1 sec

ORIGINAL REMOTE



ORIGINAL REMOTE



NEW REMOTE



Press for 3 secs

DELETING A REMOTE

SINGLE & MULTI-CHANNEL REMOTE

1. Using a paperclip or pen, press and hold the **PROGRAM** button on the original remote until the blind jogs once.
2. Using a paperclip or pen, press the **PROGRAM** button on the second remote until the blind jogs once. Second remote is now deleted and will not operate the blind.

ORIGINAL REMOTE



Press for 1 sec

ORIGINAL REMOTE



NEW REMOTE



NEW REMOTE




Press for 3 secs

PROGRAMMING INSTRUCTIONS

ADDING A CHANNEL

MULTI-CHANNEL REMOTE


1. Select the desired channel you wish to duplicate by momentarily pressing the **CHANNEL SELECTOR** button on the multichannel remote.
2. Using a paperclip or pen, press and hold the **PROGRAM** button on the remote until the blind jogs once.
3. Ensuring you are on the new channel press the **PROGRAM** button on the remote until the blind jogs once. Additional (new) channel is now added to the motor memory and can be used to operate the blind.

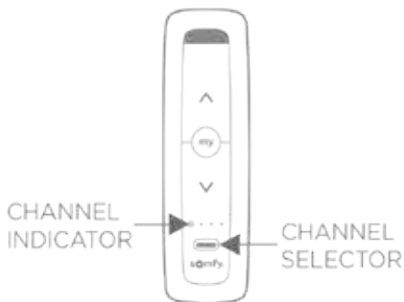

DELETING A CHANNEL

MULTI-CHANNEL REMOTE

1. Using a paperclip or pen, press and hold the **PROGRAM** button on the remote until the blind jogs once.
2. On the remote select the desired channel to be deleted.
3. Press the **PROGRAM** button on the remote until the blind jogs once. Channel is now deleted from the motor memory and will not operate the blind.

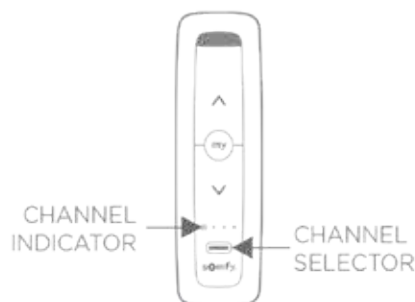

LIFT PROGRAMMING INSTRUCTIONS

ADJUSTING THE UPPER END LIMIT (UPPER BLIND POSITION)

SINGLE & MULTI-CHANNEL REMOTE

1. Press the **UP** button, to move the blind to the upper end limit.
2. Press and hold the **UP** and **DOWN** buttons simultaneously until the blind jogs.
3. Press and hold either the **UP** or **DOWN** button to adjust slats to the new position.
4. To confirm the new limit press and hold the **MY** (stop) button until the blind jogs.



ADJUSTING THE LOWER END LIMIT (LOWER BLIND POSITION)

SINGLE & MULTI-CHANNEL REMOTE

1. Press the **DOWN** button to move the blind to the lower end limit.
2. Press and hold the **UP** and **DOWN** buttons simultaneously until the blind jogs.
3. Press and hold the **UP** or **DOWN** button to move the blind to the new desired position.
4. To confirm the new limit press and hold the **MY** (stop) button until the blind jogs.



LIFT PROGRAMMING INSTRUCTIONS

SETTING INTERMEDIATE LIMIT (MY FAVOURITE POSITION)

SINGLE & MULTI-CHANNEL REMOTE

1. Press the **UP** or **DOWN** button until the blind slats reach a desired favourite position, then press the **MY** (stop) button to stop. If necessary, adjust the desired slat position by pressing and holding either the **UP** or **DOWN** button.
2. Press and hold the **MY** (stop) button until the blind jogs. Favourite my slat position is now added to the memory.
3. Activate the blind favourite position by pressing the **MY** (stop) button from any slat position. Slats will move to the closed down position prior to stopping at the programmed my position.



ADJUSTING THE FAVOURITE POSITION

SINGLE & MULTI-CHANNEL REMOTE


1. Press the **UP** or **DOWN** button until the blinds reach the desired favourite position.
2. Press the **MY** button until the blind jogs. Favourite position has now been set.



RESTORE TO FACTORY SETTINGS

1. To delete all previous settings: Using a paperclip, press and hold the **PROGRAM** button, located on the top of the motor casing, until the blind jogs 3 times (approx. 12 seconds).

**All remotes and limits will be erased from the motor memory. Motor is now reset to factory mode.*

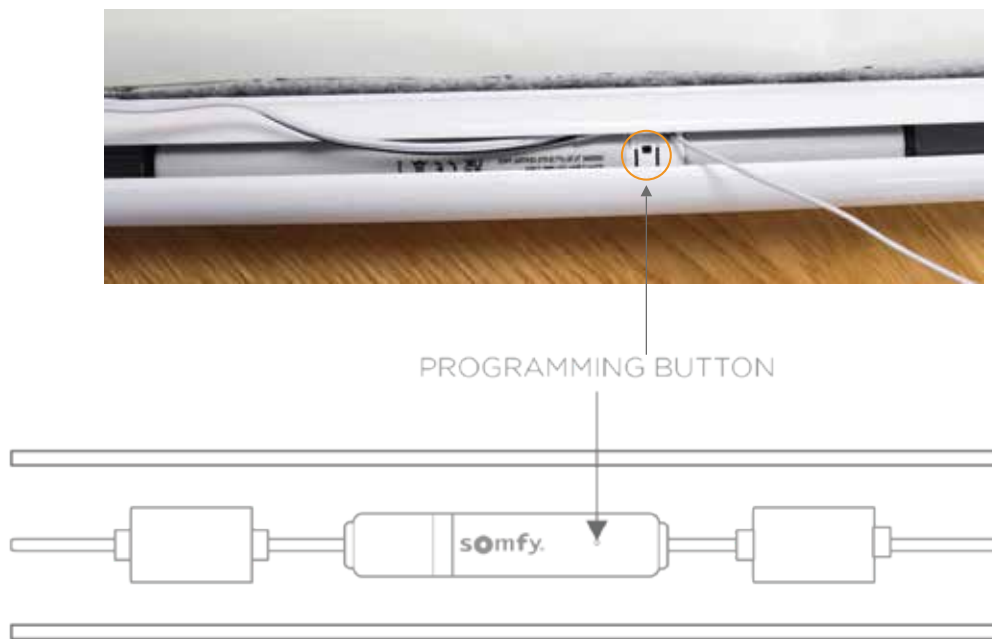

CE As the manufacturer, Somfy ACTIVITES SA, F-74300 CLAUSES hereby declares that the drive covered by these instructions, when used as intended according to these instructions, is in compliance with the essential requirements of the applicable European directives, in particular the Machinery Directive 2006/42/EC and EMC Directive 2014/30/EU.

The full text of the EU declaration of conformity is available at www.somfy.com/ce. Antoine Cr ez e, Approval manager, acting on behalf of Activity director, Cluses, 02/2019.



Please separate storage cells and batteries from other types of waste and recycle them via your local collection facility.



We care about our environment. Do not dispose of the appliance with usual household waste. Give it to an approved collection point for recycling.

CARING FOR YOUR BLIND

- Don't allow moisture to settle on the blinds.
- Wipe with a clean damp cloth.
- Vacuum your roman blind using the vacuum upholstery attachment.
- Don't use any type of detergent to clean your blind.
- Don't oil or lubricate any part of the blind to prevent damage.
- Dry cleaning recommended.



WARNING

Young children can be strangled by loops in pull cords, chains, tapes and inner cords that operate the product.

To avoid strangulation and entanglement, keep cords out of the reach of young children.

Cords may become wrapped around a child's neck.

- Move beds, cots and furniture away from window covering cords.
- Do not tie cords together.
- Make sure cords do not twist and create a loop.