


# MotorisedBlinds

*The smart choice*

## **No Drill Roller Blinds (Motorised) Installation & Operation Instructions**

## You should have:

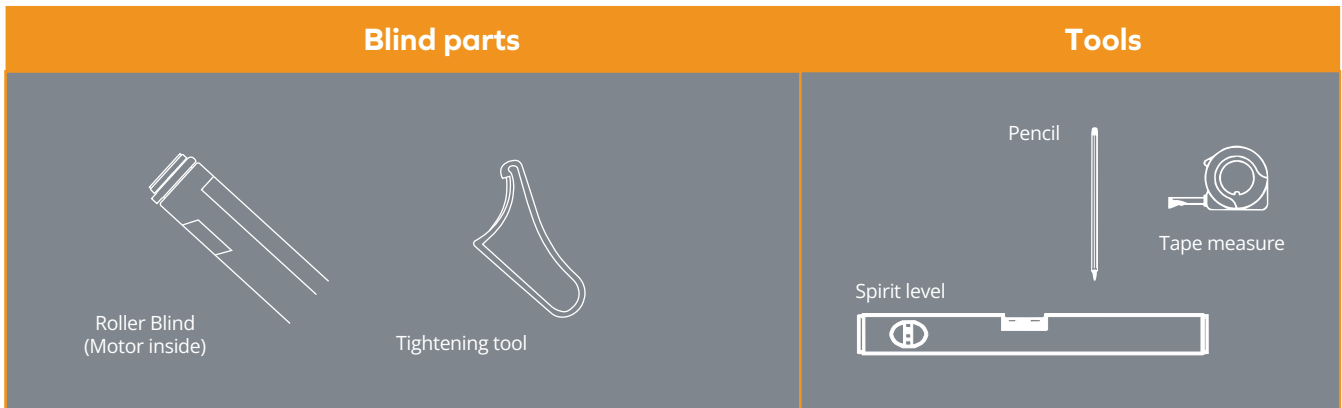

### STEP 1 - Measure and Mark


**The installation of this product should be conducted by someone competent in DIY.**

Measure and mark required position of the blind inside the recess. Make sure that walls are solid and there are no obstructions in the way i.e window handles.



### STEP 2 - Raise the plunger

Raise the plunger end (the spring end) into the recess then, lift the control end of the blind until level and release pressure. Hold the blind securely in place.

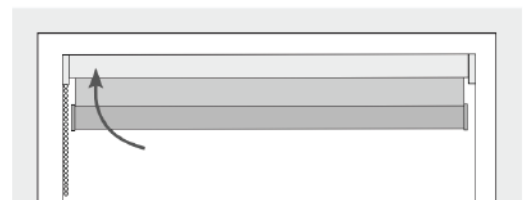

## STEP 3 - Ensure your blind is straight


Before locking the blind in place measure it with a spirit level to ensure it's straight, keeping hold of the blind.



## STEP 4 - Tighten your blind

Hold the blind securely in place and turn the tightening wheel using the supplied tool to tighten the blind in pace.

If the tightener is on the right side of the blind turn it towards you. If it's on the left, turn it away from you.

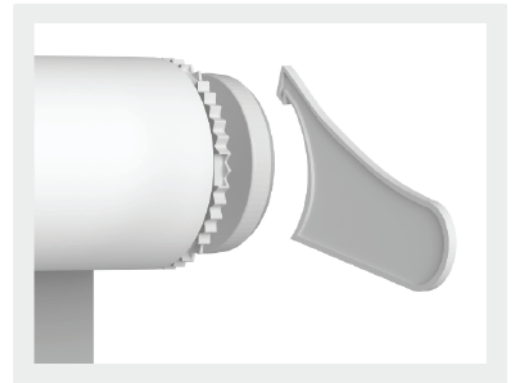

## Troubleshooting Guide

### Fabric Run-off

To correct the run-off, unroll the fabric, place a 25mm piece of sticky tape onto the tube (diagram 2) at the opposite end of the blind to the run off. Fully wind the blind to the run-off. Repeat until the fabric is no longer running-off.

DIAGRAM 1


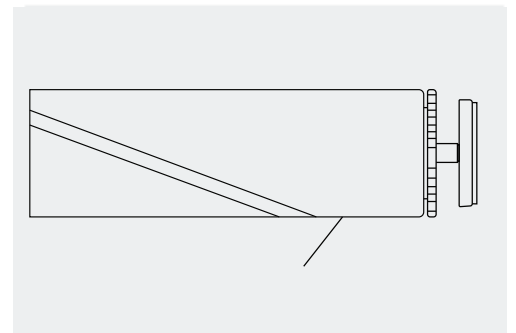


DIAGRAM 2

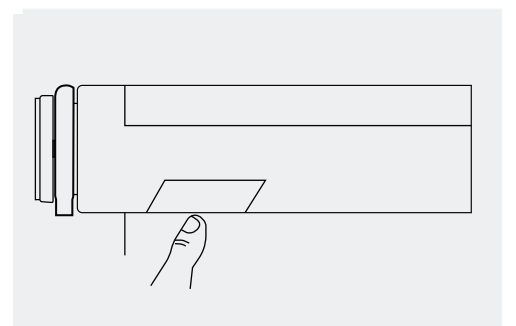


### Hard/tight Operation


Hard operation of the clutch might be caused by the tightener putting too much pressure on the blind.

To reduce it turn the tightener to the opposite direction in small turns, explained in STEP 4 ensuring that the blind stays secured and does not slip from the wall.

# OPERATING YOUR SOMFY REMOTE (1/2)

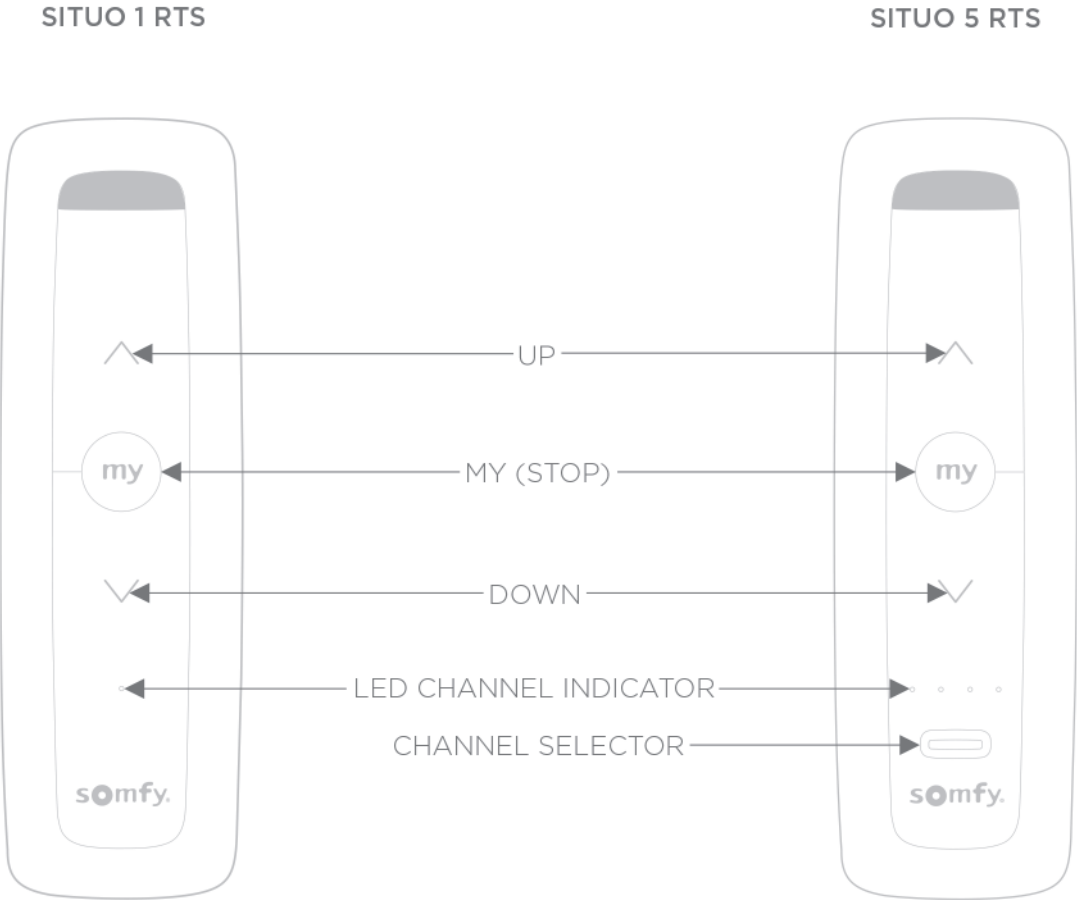

## BACK OF REMOTE

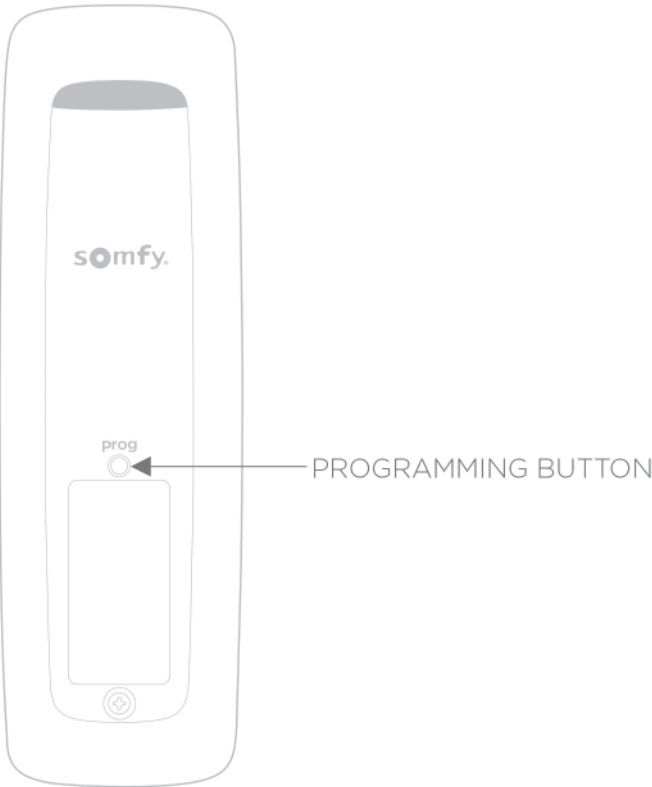


# OPERATING YOUR SOMFY REMOTE (2/2)

## WAKING THE MOTOR UP

Press and hold the programming button on the motor head for 1 second, the blind will jog once.

**Note: The motor programming button will look different depending on the model you have opted for.**

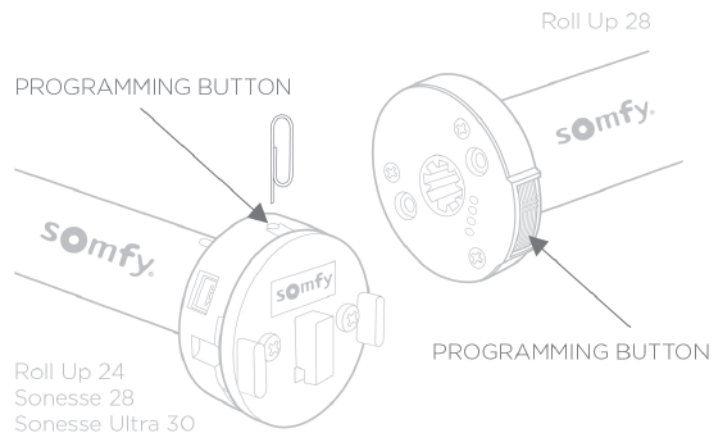

## OPERATING THE BLIND

**Note: The remote and blind should arrive paired and the lower and upper limits on the blind will be pre-set. You can operate the blind immediately, or if you wish to adjust the limits please follow the adjusting limits instructions in the programming section.**


### Single Channel Remote

1. Briefly press the **UP** button to move to the upper limit.
2. Briefly press the **DOWN** button to move to the lower limit.



### Multi-Channel Remote

1. Using the **CHANNEL SELECTOR**, select the desired channel. (Channel indicator will briefly be lit).
2. Briefly press the **UP** button to move to the upper limit.
3. Briefly press the **DOWN** button to move to the lower limit.

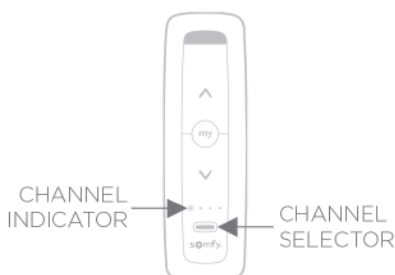


**Note: To programme blinds individually, wake the individual motor up and programme one motor at a time.**

### ACTIVATING TEMPORARY SLEEP MODE

1. Press and hold the programming button on the motor head and the blind will jog once. Briefly press the programming button and the motor will jog twice. The LED will flash orange while the motor is in temporary sleep mode.

**Note: Temporary sleep mode lasts 15 minutes.**

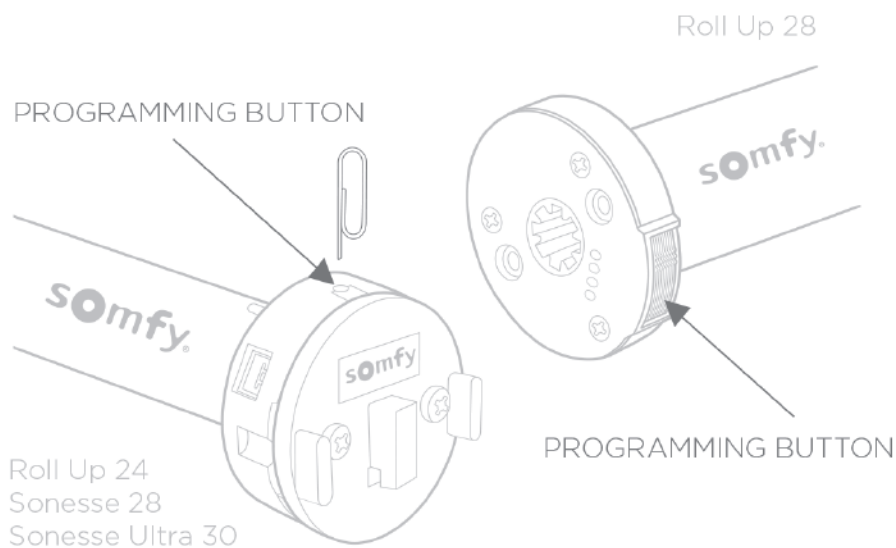

### DEACTIVATING SLEEP MODE

1. Press and hold the programming button on the motor head for 1 second, the blind will jog once.

### CHECKING THE REMOTE IS PAIRED WITH THE MOTOR

1. Press the **UP** or **DOWN** button on the remote. If the blind moves the remote is paired, if the blind does not move, follow "pairing a remote" instruction.



## PAIRING A REMOTE

### Single Channel Remote


1. Once the motor has been woke, on the remote press and hold the **UP** and **DOWN** buttons simultaneously until the blind jogs.



### Multi-Channel Remote

**Note: When pairing a Multi-Channel remote, ensure you have selected the correct channel in which you wish to operate the blind on.**

1. Using the **CHANNEL SELECTOR**, select the desired channel (channel indicator will briefly be lit).
2. Press and hold the **UP** and **DOWN** buttons on the remote simultaneously until the blind jogs.

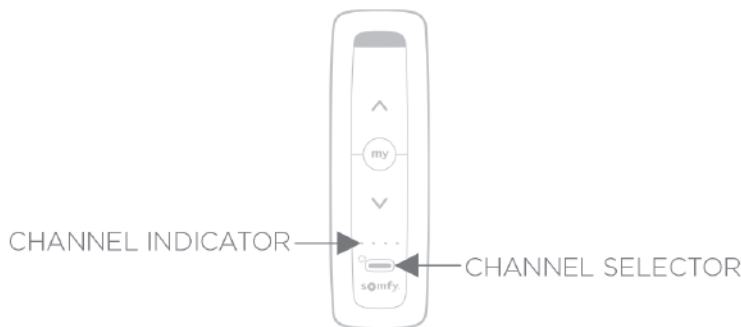


## PAIRING A SECOND REMOTE

### Single & Multi-Channel Remote


1. Using a paperclip or pen, press and hold the **PROGRAM** button on the original remote until the blind jogs once.
2. Using a paperclip or pen, press the **PROGRAM** button on the new remote until the blind jogs once. The new remote is now added to the memory and can be used to operate the blind.

 ORIGINAL REMOTE



Press for 1 sec


ORIGINAL REMOTE

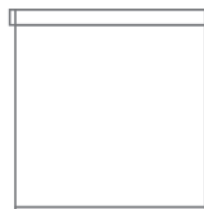

NEW REMOTE



 NEW REMOTE




Press for 3 secs

## ADDING A CHANNEL

### Multi-Channel Remote


1. Select the desired channel you wish to duplicate by momentarily pressing the **CHANNEL SELECTOR** button on the multichannel remote.
2. Using a paperclip or pen, press and hold the **PROGRAM** button on the remote until the blind jogs once.
3. Ensuring you are on the new channel press the **PROGRAM** button on the remote until the blind jogs once. The additional (new) channel is now added to the motor memory and can be used to operate the blind.

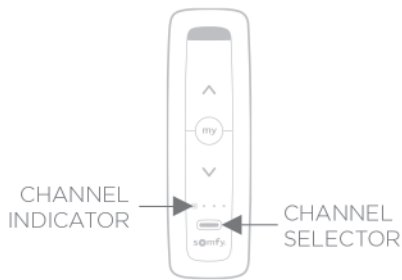

## DELETING A CHANNEL

### Multi-Channel Remote

1. Using a paperclip or pen, press and hold the **PROGRAM** button on the remote until the blind jogs once.
2. On the remote select the desired channel to be deleted.
3. Press the **PROGRAM** button on the remote until the blind jogs once. The channel is now deleted from the motor memory and will not operate.

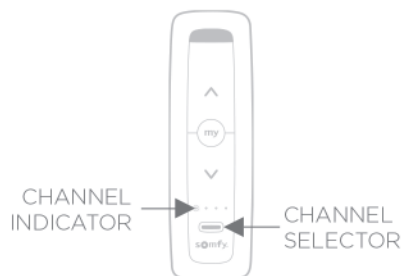

**Note: Should your blind run in the opposite direction to the remote instruction follow the below steps to correct.**

## ADJUSTING THE MOTOR ROTATION DIRECTION

1. Press the **UP** or **DOWN** button on the remote to move the blind away from the end limits
2. Press and hold the **UP** and **DOWN** buttons simultaneously until the blind jogs.
3. Press and hold the **MY** (Stop) button until the blind jogs, the rotation direction is now reversed.
4. Press the **UP** button to check the new rotation direction.



## ADJUSTING UPPER LIMIT

**Note: Blind limits will be pre-set on arrival.**

1. Briefly press the **UP** button. The blind will move to pre-set upper limit.
2. Press and hold the **UP** and **DOWN** button until the blind jogs.
3. Press and hold the **UP** or **DOWN** button to move the blind to the desired upper position.
4. To confirm the new position press and hold the **MY**(Stop) button until the blind jogs. The new upper limit is now added to the memory.



## ADJUSTING LOWER LIMIT

1. Briefly press the **DOWN** button. Blind will move to pre-set lower limit.
2. Press and hold the **UP** and **DOWN** button until the blind jogs.
3. Press and hold the **UP** or **DOWN** button to move the blind to the desired lower position.
4. To confirm the new position press and hold the **MY** (Stop) button until the blind jogs. The new lower limit is now added to the memory.



## SETTING INTERMEDIATE LIMIT (FAVOURITE POSITION)

**Note: The intermediate limit is optional and has not been pre-set.**

1. Move the blind to the desired intermediate limit using the **UP** or **DOWN** buttons.
2. Briefly press the **MY** (Stop) button to stop at the desired intermediate limit.
3. Press and hold the **MY** (Stop) button until the blind jogs, the intermediate limit is now memorised.



## SPEED ADJUSTMENT MODE

**Note: To increase or decrease the motor speed, you must first enter speed adjustment mode.**

1. Press the **UP** or **DOWN** button on the remote to move the blind away from the end limits.
2. Press and hold the **UP**, **MY** and **DOWN** buttons simultaneously until the blind jogs once.
3. The blind will jog in 10 second cycles until it enters into speed adjustment mode.



## INCREASING THE MOTOR SPEED

1. Press and hold the **UP** button until the blind jogs, repeat as needed. The maximum setting has been reached when the blind briefly moves 3 times in one direction and three times in the opposite direction.



## DECREASING THE MOTOR SPEED

1. Press and hold the **DOWN** button until the blind jogs, repeat as needed. The minimum setting has been reached when the blind briefly moves 3 times in one direction and three times in the opposite direction.




## CONFIRMING NEW SPEED SETTINGS

1. Press and hold the **MY** button until the blind briefly jogs.



## RESTORE TO FACTORY SETTINGS

1. To delete all previous settings: Using a paperclip or pen, press and hold the **PROGRAM** button on the motor head until the blind jogs 3 times. All remotes and limits will be erased from the motor memory. Motor is now reset to factory mode.

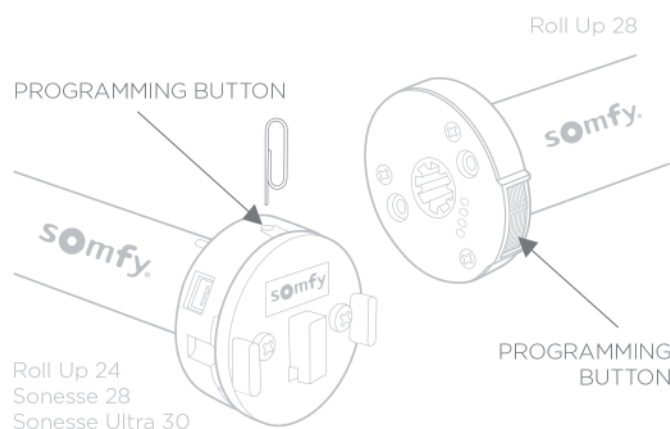

---

## MAINTENANCE

The product is maintenance free however we recommend that regular visual checks are completed to ensure that no components have been damaged, which could result in operating difficulties and/or cause a safety risk. If any maintenance is required we recommend that the work is carried out immediately, by a reputable blind company.

As the manufacturer, Somfy ACTIVITES SA, F-74300 CLUSES hereby declares that the drive covered by these instructions, when used as intended according to these instructions, is in compliance with the essential requirements of the applicable European directives, in particular the Machinery Directive 2006/42/EC and EMC Directive 2014/30/EU.

The full text of the EU declaration of conformity is available at [www.somfy.com/ce](http://www.somfy.com/ce). Antoine Cr ez e, Approval manager, acting on behalf of Activity director, Cluses, 02/2019.

Please separate storage cells and batteries from other types of waste and recycle them via your local collection facility

We care about our environment. Do not dispose of the appliance with usual household waste. Give it to an approved collection point for recycling.